

ROKOKAURI - BURBUSH


SIGNALLING & INTERLOCKING ARRANGEMENTS

THESE ARRANGEMENTS WILL BE BROUGHT INTO USE AT A TIME AND DATE TO BE ADVISED BY SEMI-PERMANENT BULLETIN.
THIS CANCELS S&I No. 3241
THESE TO BE COMPLETED BY THE RECIPIENT OF THE S & I DIAGRAM

UP

ROKOKAURI

BURBUSH (BBH)

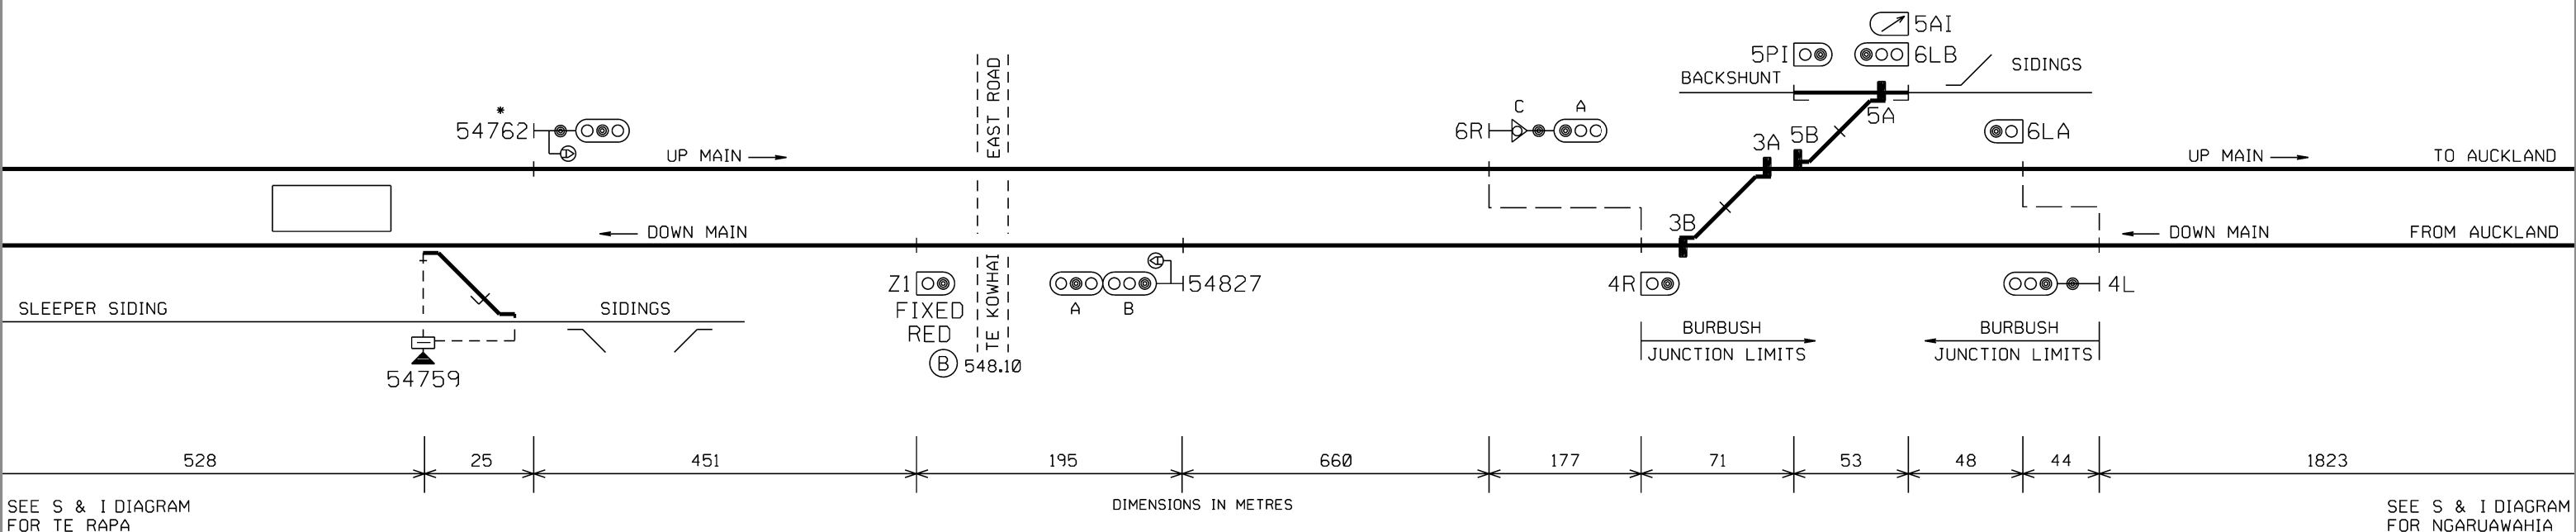

SEE S & I DIAGRAM
FOR TE RAPA

SEE S & I DIAGRAM
FOR NGARUAWAHIA

BURBUSH: DESCRIPTION OF SIGNALS

4L	DOWN STARTING	
4R	SHUNT AND UP STARTING	LOW SPEED TO UP MAIN OR SIDINGS
6LA	SHUNT AND DOWN STARTING	LOW SPEED TO DOWN MAIN
6LB	SHUNT AND DOWN STARTING FROM SIDINGS	LOW SPEED TO DOWN MAIN
6RAC	UP STARTING	NORMAL SPEED TO UP MAIN
		LOW SPEED TO SIDINGS

* 54762 SIGNAL CAN BE CONTROLLED TO STOP BY TRAIN CONTROL.
FOR TRAINS STOPPING AT ROKOKAURI, 54762 WILL CLEAR
AUTOMATICALLY 40 SECONDS AFTER OCCUPYING THE
UP MAIN PLATFORM TRACK CIRCUIT.